



SmarPID M5 PRO

Quick Start Guide



<https://smartpid.com>

smartpid@arzaman.com

SmartPID M5 PRO basic concept

Designed for the industrial and pro market to manage **any thermal regulated application** bridging the gap between complex and expensive industrial controller (PLC) and simple on/off thermostat.

The flexibility, feature richness and smartness make smartPID M5 PRO a unique product on the market that can replace legacy thermostat and manage any application in a smart way !




SmartPID M5 PRO characteristics

- Dual Independent control channels (2 in 1 controller)
- Fully configurable PID-PWM control or ON/OFF control with hysteresis
- DIN 1/16" 48×48 compact enclosure
- Graphical 320×240 TFT colour display with interactive menu and GUI
- 3 push buttons for GUI interaction
- DC 5-36V power supply OR 110/220 AC power supply
- 5 different temperature probes type selectable
 - NTC 10k
 - RTD (PT100)
 - Digital 1-wire DS18B20 or
 - K-type thermocouple probes (with external adapter)
 - Support of **wireless Bluetooth temperature sensors**
- 4 different outputs that can be assigned by SW to each control channel
 - 2x DC out 5-36V 2.5A for heavy load driver
 - 2x 10 A relay
- WIFI and Bluetooth connectivity
- Loudspeaker
- uSD card memory support for data logging
- I2C expansion port
- OTA Firmware upgrade
- On Board EEPROM for data persistence and auto recovery after power outage

SmartPID M5 PRO back panel pinout





| TEMP PROBE | SW1 SW3 | SW2 SW4 |
|--------------------------|------------|------------|
| NTC 10K | OPEN | OPEN |
| PT100 | OPEN | CLOSE |
| DS18B20 | CLOSE | OPEN |
| THERMOCOUPLE MAX31850 | CLOSE | OPEN |

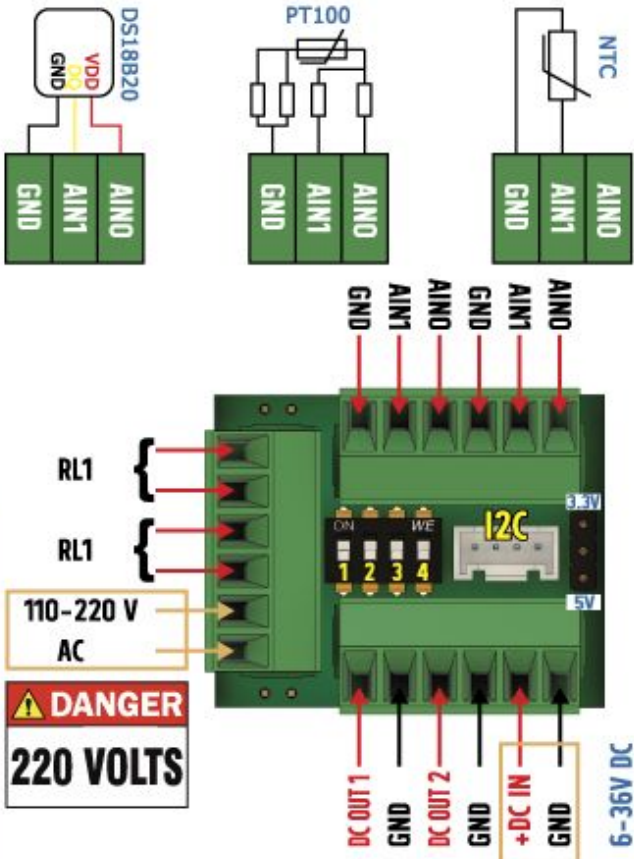



DIP switch configuration for temp probes selection

Temperature probe selection need to be done either via the SW menu and configuring the back panel dip switch

| | SW1 | SW2 |
|--------------------------|-------|-------|
| NTC 10K | Open | Open |
| PT100 | Open | Close |
| DS18B20 | Close | Open |
| Thermocouple MAX31850 | Close | Open |

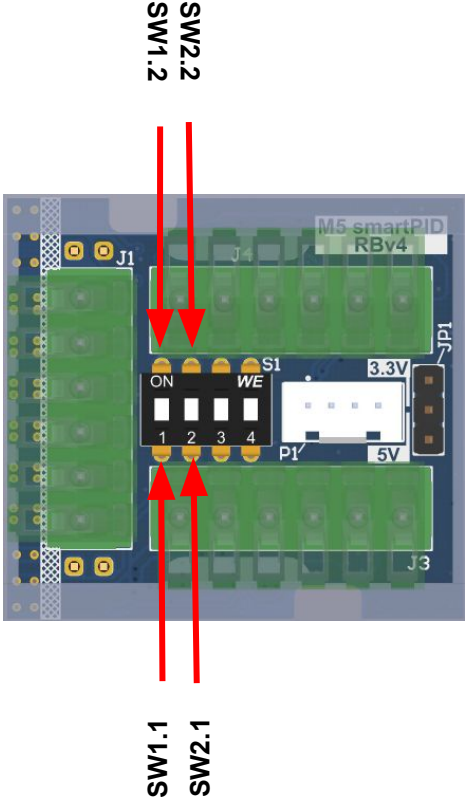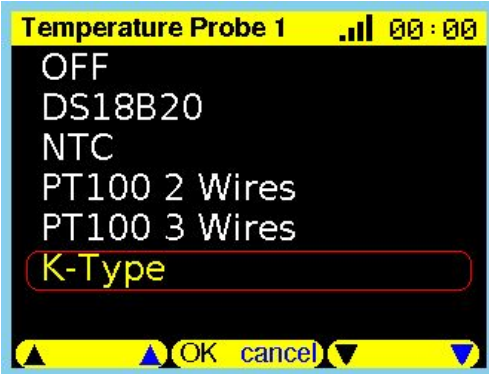

ThermoCouple Adapter (MAX31850)

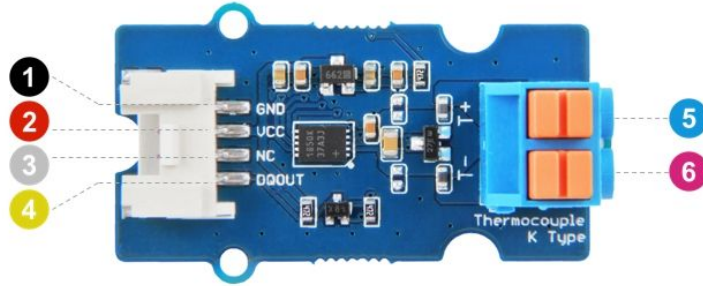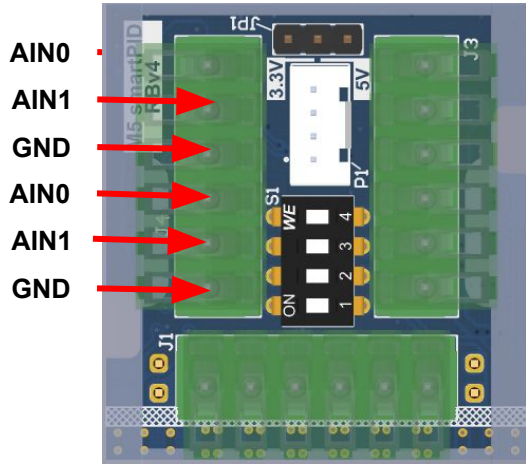


Connect

- 1) GND ⇒ GND of CH1 or CH2
- 2) 3V3 ⇒ AIN0 of CH1 or CH2
- 4) DATA ⇒ AIN1 of CH1 or CH2
- 5)6) thermocouple

Select DIP switch for K-type (SW1 close, SW2 open)
Select in SW configuration the K-type temp probe

Bluetooth temperature sensor pairing

- Navigate to the BT Sensor config menu (HW setup)
- Select “Pairing” menu then perform sensor scan
- The BT-05 sensors must be powered on (press central button)
- Select the BT05-xxxxx sensor and confirm
- Check the pairing status in the “status” menu
- In the BT config menu you can configure
 - Sample Time
 - Transmission Power
- Once paired the sensor BT05-xxxxxx will be available in the HW config/sensor type menu as any other wired sensor

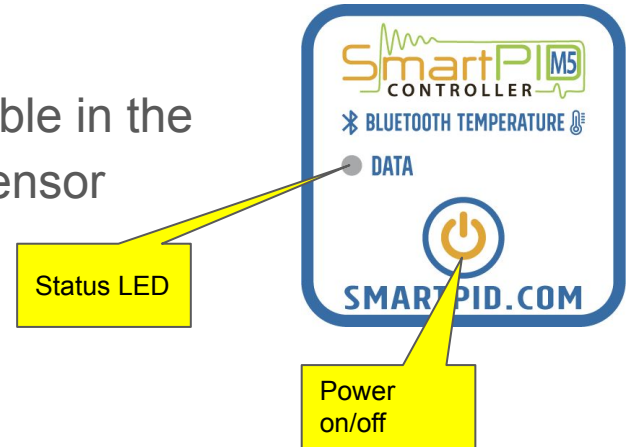

SmartPID M5 PRO main menu



Start

select standard or advanced mode (profiles), select the set point and start the control process



Monitor

temperature on both channel is monitored. With up/down button is possible to select the output (DC or relay) and with SET activate the output



Setup

- **HW setup** --> the HW resources are configured and assigned to I/O process
- **Unit Parameter**--> the main parameter that control the PID process behavior are configured in this menu
- **Process parameter**--> smart thermostat process specific parameter are configured in this menu
- **PID auto tune**--> this is a special section to configure and run the auto tune process to help end user to calculate critical parameters K_p , K_i , K_d that regulate PID behavior



WIFI

- Check wifi connection status
- Select WiFi connection mode (AP/client/Auto)
- Check WiFi parameters (SSID/PWD/IP)
- Check Server parameters (MQTT address/credentials)



Profile

- add/edit/delete temperature profiles
- up to 10 different profiles with up to 10 ramp/soak valued



Info

- display SW version
- start SW upgrade over the air (OTA)
- display serial number
- display status of various components (wifi,cloud server)

SmartPID M5 PRO - HW set up



| Parameter | Description |
|----------------------|---|
| Control Mode | <i>Select Heating/Cooling/Thermostatic mode</i> |
| Heating/Cooling mode | <i>Select control algorithm PID or ON/OFF</i> |
| Multi control | <i>Select number of control channels</i> |
| Out1 Heating/Cooling | <i>Assign to CH1 control process output resources (relay or DC)</i> |
| Out2 Heating/Cooling | <i>Assign to CH1 control process output resources (relay or DC)</i> |
| BT sensor config | <i>Configure Bluetooth temperature sensor</i> |
| T. probe 1 & 2 | <i>Select temperature probe for CH1 and CH2 (*) (NTC/DSD18B20/PT100/thermocouple/bluetooth)</i> |

(*) user need to configure DIP switch on back plane

SmartPID M5 PRO - unit parameters



| Parameter | Description |
|-------------------------|--|
| Temperature Unit | <i>Select temperature unit visualization Celsius or Fahrenheit</i> |
| Probe 1 & 2 calibration | <i>Adjust temperature probe reading with fixed offset +-5c</i> |
| NTC Beta | <i>Select NTC probe beta factor</i> |
| Auto Resume | <i>Enable/Disable process auto resume function after power supply failure or process crash</i> |
| Button beep | <i>Enable/disable button press sound</i> |
| Clock SetUp | <i>Configure real time clock either manually or via NTP</i> |

SmartPID M5 PRO - process parameter



| Parameter | Description |
|--------------------|--|
| Set Point 1 & 2 | <i>Default temperature set point for CH1 and CH2</i> |
| Timer 1 & 2 | <i>Default countdown timer for CH1 and CH2</i> |
| PID 1&2 Kp Ki Kd | <i>Define the proper constant value for the PID algorithm tuning for CH1 /CH2</i> |
| Reset DT 1 & 2 | <i>Define temperature variation from set point to reset the count down timer</i> |
| Fridge delay 1 & 2 | <i>Define the duration of the fridge protection timer (0 means no delay logic)</i> |
| Sample Time | <i>Define the sample time of temperature in ms</i> |
| PWM Period | <i>Define the PWM period/window size for PWM control in ms</i> |
| Ramp/Soak | <i>Define if the control logic is dynamic or static (see proper section)</i> |
| Sound Alarm | <i>Define for each alarms if the buzzer is activated or not</i> |

SmartPID M5 PRO - profile definition



In the menu “profile” it’s possible to create/modify/view/delete temperature profiles to be selected in the advanced running mode.

For each point of the profile user should define:


SP X that is the starting set point temperature

Ramp Time Y that is the time to move set point from X to X+1

Soak time Z that is the time the temperature is kept constant

If the ramp time = 0 the set point is moved instantly (step)

If the next step has soak time=0 (or is the eight steps) the SP is moved to that value and is kept constant until the process abort by user

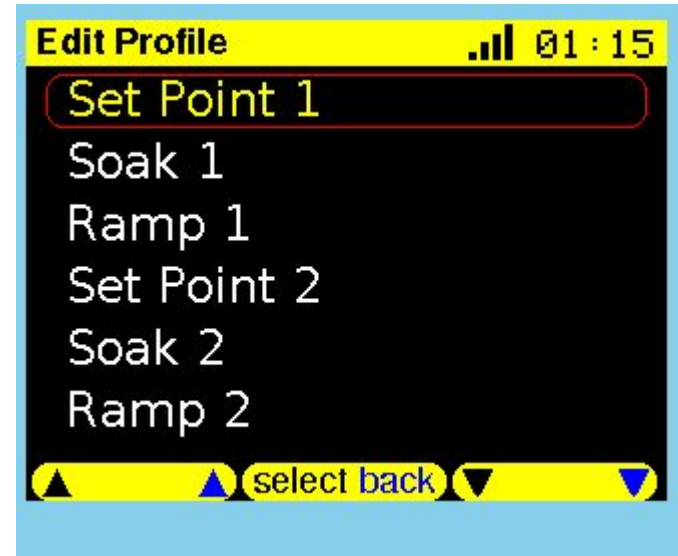

SmartPID M5 PRO - ramp/soak




Ramp/soak = STATIC

Soak time start when ramp time finish independently from temperature. Each soak period is predefined and is independently from the current temperature and set point.


After each soak period a new set point is defined and a RAMP time defines the time needed to reach the new set point. SP is moved linearly from SP_x to SP_{x+1} with increment of $1c/40f$

If the next step has soak time=0 (or is the eight steps) the SP is moved to that value and is kept constant until the process abort by user

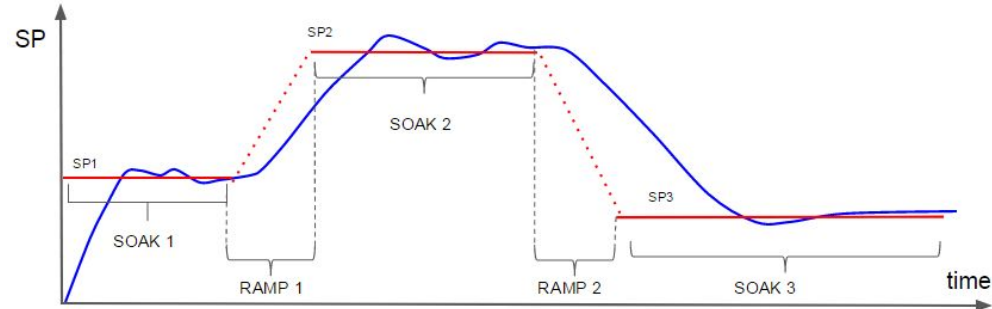

Ramp/soak = DYNAMIC

Soak time start when temperature reach the set point. When the temperature reached the SP_x the soak period is started. After each soak period a new set point is defined and a RAMP time defines the time needed to reach the new set point. SP is moved linearly from SP_x to SP_{x+1} with increment of $1c/40f$. If the next step has soak time=0 (or is the eight steps) the SP is moved to that value and is kept constant until the process abort by user.

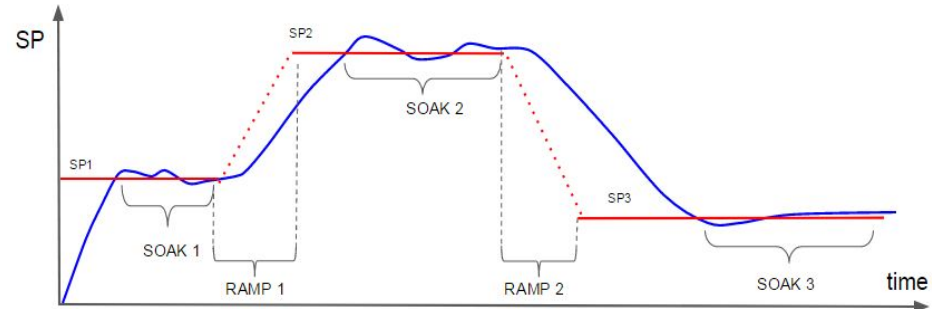

SmartPID M5 PRO - monitor mode



Monitor mode allows to measure temperature of both channels and activate manually the output (relay or DC)


The screenshot shows the 'Monitor' mode interface on a device. The top status bar displays 'MQTT', signal strength, and a clock '00:03'. The main display is divided into four quadrants: top-left shows 'T1 - Celsius' at '30.0'; top-right shows two DC output gauges, 'DC1' at 100% and 'DC2' at 44%; bottom-left shows 'T2 - Celsius' at '28.0'; bottom-right shows two relay output buttons, 'RL1' (ON) and 'RL2' (OFF). A bottom navigation bar contains 'done' and 'exit' buttons with directional arrows. Below the screen are three physical buttons. Callouts provide the following information:

- wifi/cloud connection status clock**: Points to the top status bar.
- CH1/CH2 temperature**: Points to the temperature readings (30.0 and 28.0).
- DC output status PWM 0-100%**: Points to the DC1 and DC2 gauges.
- Relay output status PWM 0-100%**: Points to the RL1 and RL2 buttons.
- Activate Output**
• Long press EXIT: Points to the physical buttons below the screen.
- Select Output**
• Regulate PWM: Points to the physical buttons below the screen.

SmartPID M5 PRO - run mode




In run mode smartPID execute the control loop (PID or ON/OFF) and drives the outputs accordingly

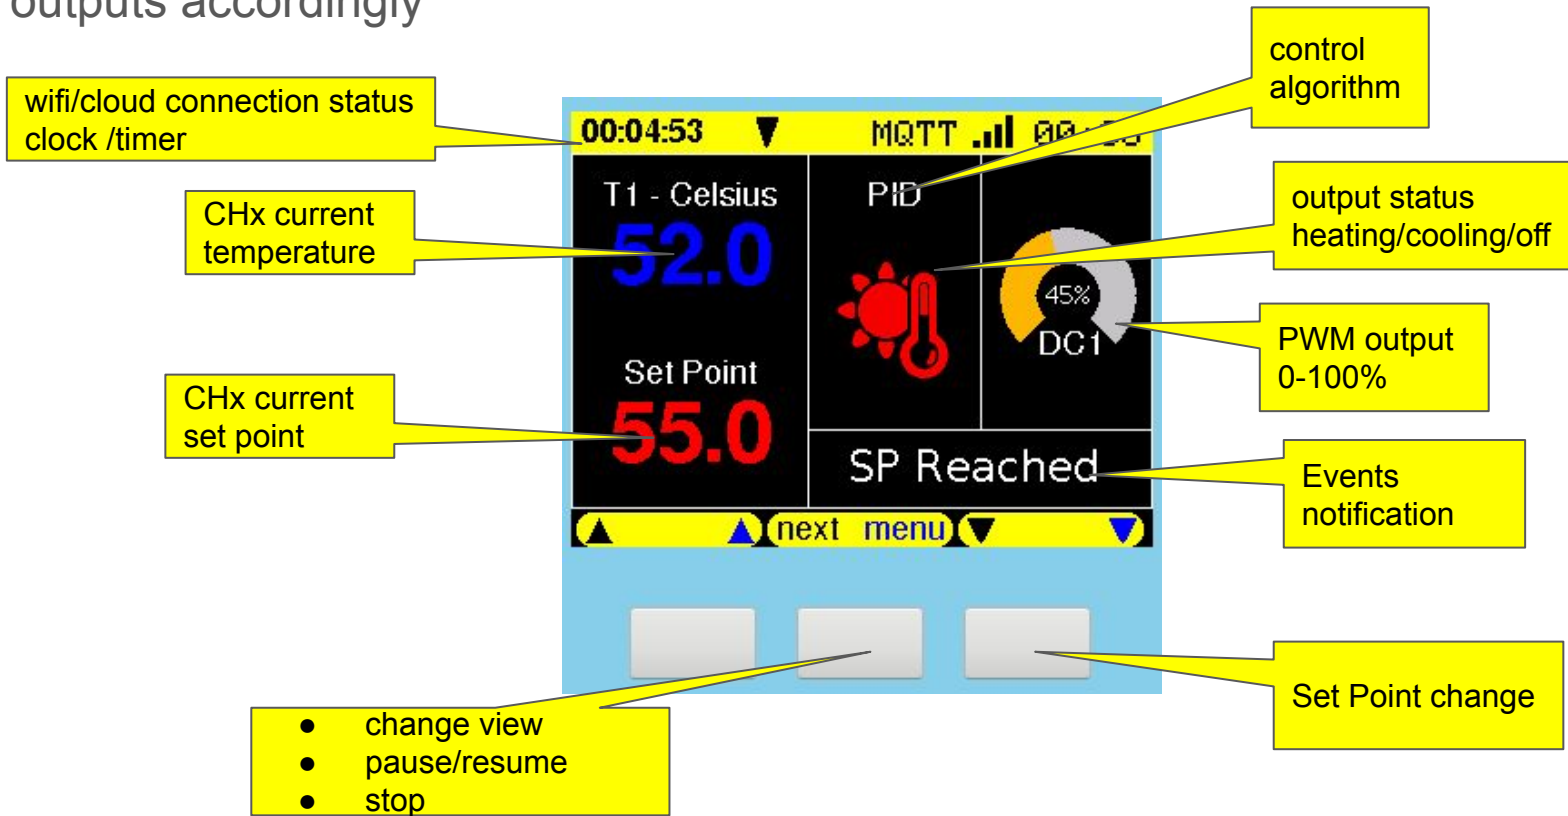

SmartPID M5 PRO - run mode - graphic view



graphic mode reports the plot of CHx temperature, Set Point , PWM out

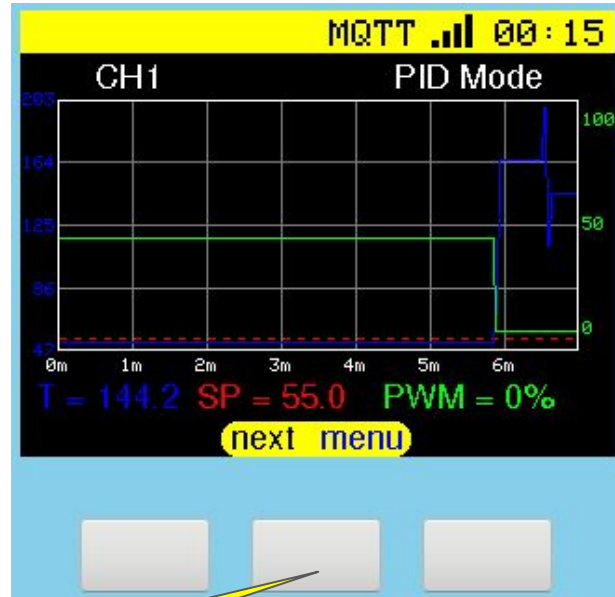


Change view
Stop

SmartPID M5 PRO - run mode - syntetic view



in this mode a systemsys of both channel status and output is reported

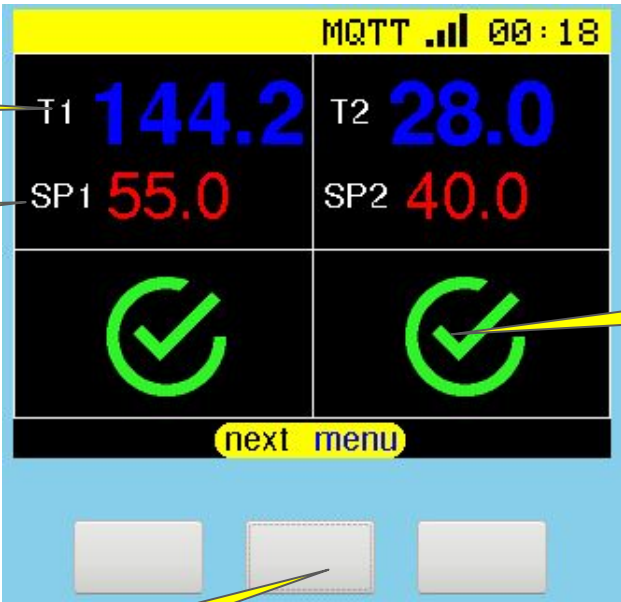

The image shows a synthetic representation of the SmartPID M5 PRO interface. At the top, a yellow bar displays 'MQTT' with a signal strength icon and '00:18'. The main display is a 2x2 grid of black panels. The top-left panel shows 'T1 144.2' in blue, with a yellow callout 'CHx current temperature' pointing to it. The top-right panel shows 'T2 28.0' in blue. The bottom-left panel shows 'SP1 55.0' in red, with a yellow callout 'CHx current set point' pointing to it. The bottom-right panel shows 'SP2 40.0' in red. Below the temperature and set point values are two green checkmarks in circles. A yellow callout 'output status CHx heating/cooling/off' points to the right checkmark. At the bottom of the grid is a yellow bar with the text 'next menu'. Below the grid are three grey buttons. A yellow callout 'Change view Stop' points to the middle button.

| Channel | Current Temperature (T) | Current Set Point (SP) | Output Status |
|---------|-------------------------|------------------------|---------------------|
| CH1 | 144.2 | 55.0 | Heating/Cooling/Off |
| CH2 | 28.0 | 40.0 | Heating/Cooling/Off |